



www.snappernet.co.nz

Vigor130 » ADSL/VDSL Quick Start Guide

Configure your computer's network

Connect your computer to the Vigor130 with an Ethernet cable (supplied). Ensure your computer is obtaining an IP address automatically.

Connect to the Web Interface

Open your Web Browser (e.g. Internet Explorer, Google Chrome or Mozilla Firefox), enter http://192.168.1.1/ into the address bar, and press the Enter key on your keyboard.



You should be asked for a username and password. Enter admin into the Username field and admin into the Password field and click Login.

PPP Setup

On the left-hand navigation menu, click Internet Access > PPPoE/PPPoA.

Ensure the settings on this screen are:

For ADSL

VPI: 0 VCI: 100 **VC MUX Encapsulating Type:** Protocol: **PPPoA**

For VDSL

Encapsulating Type: LLC/SNAP Protocol: **PPPoE**

Uncheck "PPPoE Pass-through For Wired LAN" Check "Always On"

Set "Fixed IP" to No (Dynamic IP)

Enter the Username and Password provided to you by your Internet Service Provider. Note: Username is often in the form of an email address.

All other fields can be left as default.

All fields are case sensitive.


PPPoE/PPPoA Client	Enable Disable	ISP Access Setup	
DSL Modem Settings (f	iar ADCL made only)	ISP Name	
Multi-PVC channel	Channel 1 ▼	Username	
VPI	0	Password	(·
VCI	100	PPP Authentication	PAP or CHAP ▼
Encapsulating Type	LLC/SNAP ▼	Always On	
Protocol	PPPoF ▼	Idle Timeout	-1 second(s)
Modulation	Multimode ▼	IP Address From ISP	WAN IP Alias
	Widitilliode	Fixed IP Yes •	No (Dynamic IP)
PPPoE Pass-through		Fixed IP Address	
For Wired LAN			
Note: If this box is checked while using the PPPoA protocol, the router will behave like a modem which only serves the PPPoE client on the LAN.		Default MAC Address Specify a MAC Address	
The common bottom		Inday(1 15) in Cahada	ula Catura
Mode	ARP Detect ▼	Index(1-15) in <u>Schedu</u>	uile Setup:
Ping IP		=>	,,
TTL:			
мти	1492 (Max:1492)		

OK

Click **OK**. Then allow the router to reboot. This will take about a minute until you can log back in to the router again.

VLAN Tag ID (VDSL only)

Most ISPs providing VDSL require the insertion of VLAN Tag ID 10. This can be enabled on the **Internet Access** > **General Setup** screen after the router has rebooted as seen in the image below.

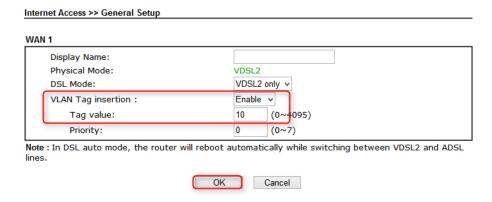

Reboot again then check the Online Status > Physical Connection screen to confirm that the circuit has come up.


Security

To protect the security of your router settings you should change the Administrator Password from the default to a more secure password of your choosing.

On the left-hand navigation menu, click System Maintenance > Administrator Password.

You will be prompted to change the Administrator Password. This is the password used to access the modem configuration in future, not the password for your internet connection. Type the old password (admin) in the first field and repeat the new password into both other fields and click **OK**.

Do not forget your new password as this will be needed to access the router again later.

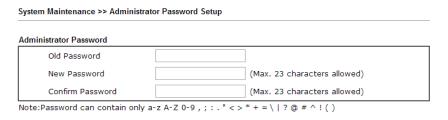

Advanced Users: PPPoA passthrough mode

Most Broadband routers (e.g. Vigor2130 or a PC running pfSense) are only able to authenticate using PPPoE, but New Zealand ADSL requires PPPoA authentication. Vigor ADSL modems can be configured for PPPoA/PPPoE pass-through to allow you to connect a broadband router such as the Vigor2130 or a Smoothwall box to an ADSL line.

To configure the DV130 to do this remove the username and password and check the box under PPPoE Pass-through on the Internet Access > PPPoE / PPPoA page of the Vigor web interface.

PPPoE Pass-through

For Wired LAN

Then set up your Broadband router or firewall as a PPPoE device, providing it with your ISP's username and password. *Ensure you leave the Service Name field on your router/firewall blank*. Your Broadband router will be assigned your Public IP address and directly control your connection.

Need help?

We're available 9:00am to 5:00pm, Monday to Friday.

Phone: 09 415 4182 Email: tech@snappernet.co.nz

Firmware updates and a VDSL pass-through sample config are available free of charge from www.draytek.net.nz